

**WAGNER MODEL L620**  
**“DIGITAL RECORDING”**  
**HAND-HELD MOISTURE METER**  
**OWNER’S MANUAL**



**WAGNER**

**M E T E R S**

World Leader in Moisture Measurement Technology

DOCUMENT NO: [500-62001-001](#)

REV: I

## Copyright Notice

Wagner Model L620 “Digital Recording” Moisture Meter Owner’s Manual

© Copyright 1996-2017 Wagner Meters. All Rights Reserved Worldwide. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any other language in any form by any means without the express written permission of Wagner Electronic Products, Inc.

### Technical Support

Should you require support, please consult your printed documentation to resolve your problem. If you are still experiencing difficulty, you may contact a Wagner Technical Service representative during normal business hours—7:30 a.m. to 4:00 p.m. Pacific Standard Time, Monday through Friday.

Voice: (541) 582-0541

Fax: (541) 582-4138

E-Mail: [support@wagnermeters.com](mailto:support@wagnermeters.com)

Mail: Technical Services Department  
Wagner Meters  
326 Pine Grove Road  
Rogue River, OR 97537

## Table of Contents

FCC Compliance Statement .....	4	Editing Species Name .....	13
L620 Moisture Meter .....	5	Mean/Std Statistics .....	14
L620 Specifications .....	5	High/Low Statistics .....	14
Getting Started .....	6	Clear Menu .....	15
Taking Measurements .....	7	Clear Menu Selection .....	15
Meter Storage .....	7	Clear Group .....	16
Turning on the L620 .....	8	Clear Readings .....	16
Readings Mode .....	8	Clear All Groups .....	16
Storing Readings .....	8	Calibration .....	17
Changing Groups .....	9	Backlight .....	18
Activating Main Menu .....	9	Battery .....	18
Main Menu Selection .....	9	Restore Factory .....	18
Locale Menu .....	10	Technical Notes .....	19
Locale Menu Selection .....	10	Factory Species List .....	20
Changing Language .....	10	Species Setting Tables .....	21
Changing Date Format .....	11	Imported Species .....	22
Date Menu Selection .....	11	Checking the Moisture Content in Veneer .....	24
Changing Decimal Format .....	12	Questions and Answers .....	25
Decimal Menu Selection .....	12	Warranty .....	29
Changing Species .....	13	Registration .....	29
Editing Specific Gravity .....	13	Repair Service .....	30

## FCC Compliance Statement

This equipment has been tested and found to comply within the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.

This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Move the equipment away from the receiver
- Plug the equipment into an outlet on a circuit different from that to which the receiver powered
- If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions.

CAUTION: Only equipment certified to comply with Class B (computer input/output devices, terminals, printers, etc.) should be attached to this equipment.

Finally, any changes or modifications to the equipment by the user not expressly approved by the grantee or manufacture could void the user's authority to operate such equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

### **Canadian Department of Communications Compliance Statement**

This Class B digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations.

### **Avis de conformité aux normes du ministère des Communications du Canada**

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

## L620 Moisture Meter

Wagner introduces the L620 Digital Recording Hand-Held Moisture Meter. This new model replaces the proven L610 model instrument, providing improved moisture measurement accuracy in the 15%+ moisture content range. As with the L610 model, the L620 utilizes Wagner's Intellisense™ technology to truly read the moisture IN the wood, not ON the wood.

- Stores and displays up to 32 user-selected species adjustments by name.
- Stores up to 500 separate moisture readings.
- Stores readings in up to 5 groups.

Using non-volatile memory, stored readings are retained even when the batteries are removed. A backlit LCD display features a 2-line, 32 character display. Function buttons and scroll arrows operate a menu system that guides the user step-by-step through the selecting, storing and reporting process. The meter has auto-shut-off to extend battery life.

Like all Wagner Hand-Held Moisture Meters, moisture readings are virtually unaffected by wood temperature in the normal operating range outside of a kiln environment. Contact Wagner technical support for guidelines when wood is below freezing.

To learn more about Wagner Meters, visit us on the Web at: <http://www.wagnermeters.com>

## L620 Specifications

Physical Size (in):	L 8.5 x W 4 x H 3.75
(mm)	L 216 x W 102 x H 95
Scanning Area (in):	2.5 x 2.5
(mm)	63.5 x 63.5
Scanning Depth (in):	1.0 in. (25.4 mm)
Weight:	18 oz. (510 g)
Power:	4 AA Alkaline Batteries
Battery Life:	~50 hours of continual use. ~9 hours of continual use with the Backlight ON.
Auto Power Shut Down:	After 1 minute of non-use.
Moisture Measurement Range:	5 to 30% (dependent on species setting)
Specify Gravity Range:	0.30 to 0.75
Meter Operating Temperature:	30° to 120°F
Patent Number:	5,486,815

## Getting Started

This sections informs you about

- Turning on the meter
- Moisture readings
- Storing a reading
- What is a group
- Viewing statistics
- The menu system
- Changing species

Before you begin, make sure your hand-meter has a fresh set of batteries.

### ***Turning on the meter***

Turn on the meter by pressing the STORE button for one second. The display will momentarily show the model, software version, and revision numbers. Your meter is now ready to take moisture readings.

### ***Moisture readings***

Take moisture readings by pressing the bottom of the meter to the wood surface. The first line of the display shows the species for which the meter is calibrated. The second line shows the reading in percent moisture content.

### ***Storing a reading***

While pressing the bottom of the meter to the wood surface at the location of interest, press the STORE button to save that reading in a group.

### ***What is a group?***

A group is a set of readings that belong together. You determine which readings belong together. Switch to another group by first pressing the GROUP button. Press the ARROW buttons to select a different number. Press the STORE button to activate the selection. The active group number is shown in the bottom right corner of the display.

### ***Viewing statistics***

Statistical values such as mean, standard deviation, highest reading, and lowest reading are calculated on individual groups. They may be accessed for viewing by using the menu system.

### ***The menu system***

For example, to view the mean and standard deviation values for the active group, press the MENU button to activate the main menu. Press the ARROW button to scroll through the menu until the menu item Mean/Std is displayed. Press the STORE button to activate the menu item.

### ***Changing species***

If the meter is not set to the species you are measuring change it using the menu system. See the section “Factory Species List” for a complete list of available species. If your species is not listed, you may customize a species as outlined in the section “Changing Species.”

## **Taking Measurements**

In order to take correct moisture content measurements, ensure that the meter's specific gravity (species) setting is the correct one for your species of wood as listed in the Species Setting Table or Species lists.

Be sure to press down firmly on the center of the meter with approximately 3 pounds of force to ensure good sensor plate contact with the wood surface. This is especially important on rough-sawn lumber. Do not take readings where there is a noticeable defect or knot in the lumber.

If there is visible surface moisture or water, wipe off any excess, and let the surface of the wood dry-out for a couple of minutes, then take the reading. If possible, turn the board over and measure the other side. If the thickness of the piece is greater than 3 inches, it is a good idea to take measurements on both sides.

Ensure that there is nothing (especially your hand or metal) under the material you are measuring. The actual moisture sensing area is a 2 ½ inch by 2 ½ inch rectangle on the meter's backside (opposite side of the panel meter). In order to take a valid measurement, this sensing area must be completely covered with the wood you are measuring. If the sensing area is not completely covered, your moisture reading will be inaccurate.

Additional meter corrections may be necessary if you are measuring Raft Wood (salt water permeated), or lumber treated with Copper, Chrome, Arsenic (CCA), or Ammonical, Copper, Quantenary (ACQ). Contact Wagner

Technical Services for further information for these applications.

## **Meter Storage**

For a long service life, it is important to store your meter properly. Avoid excessively hot or cold locations. Do not store the meter in an area with excessive electro-magnetic interference, such as near an electric motor, or where it could be crushed, such as in front of a forklift. Do not leave the meter in an operating kiln during the drying cycle.

	<b>Turning on the L620</b>	<b>Readings Mode</b>	<b>Storing Readings</b>
<b>Operation</b>	<p>To turn on the L620, press the STORE button for one second. The display will briefly show the Model, Version, and Revision numbers.</p> <p>The L620 will turn off after 1 minute of inactivity. Inactivity means no change in moisture readings or buttons pressed.</p>	<p>The L620 takes continuous percent moisture content (%MC) readings and puts them on the display. When a reading is below 5%, the first line shows the current species and group field label. The second line shows the current reading and the active group number. When a reading is above 5%, the first line becomes a bar graph representing the current reading.</p>	<p>When storing a valid reading, the second line will display the message "Storing" along with the sample number.</p> <p>When attempting to store an invalid reading, the second line will display message "Too Low" along with the last sample number.</p>
<b>Display</b>	<div style="border: 1px solid black; padding: 5px; width: fit-content;"> WAGNER L620  V xx.xx Rxx.xx </div>	<div style="border: 1px solid black; padding: 5px; width: fit-content;"> Douglas Fir    GRP  .0 %            0 </div>	Storing    14 or Too Low    13
<b>STORE</b>	To turn the meter on, press the STORE button for one second.	Press the STORE button to store the current reading into the active group.	
<b>GROUP</b>		Press the GROUP button to activate the change group function.	
<b>MENU</b>		Press the MENU button to activate the main menu.	
<b>ARROWS</b>		Refer to the Factory Default section.	



	<b>Changing Groups</b>	<b>Activating Main Menu</b>	<b>Main Menu Selection</b>
<b>Operation</b>	<p>Press the GROUP button to activate the change group function.</p> <p>Use the ARROW buttons to select the desired group number.</p> <p>Press the STORE button to activate the change.</p> <p>The group number range is from 0 to 4.</p>	<p>Press the MENU button to activate the main menu.</p> <p>Press the ARROW buttons to scroll through the menu.</p> <p>Press the STORE button to activate the selected menu item.</p>	<p>Locale</p> <p>Battery</p> <p>Backlight</p> <p>Calibration</p> <p>Clear</p> <p>High/Low</p> <p>Mean/Std</p> <p>Species</p>
<b>Display</b>	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> Group 1 </div>	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> Menu Language </div>	
<b>STORE</b>	Press the STORE button to save the change and return to the readings mode	Press the STORE button to activate the selected menu item.	
<b>GROUP</b>	Press the GROUP button to cancel the change and return to the readings mode	Press the GROUP button to return to the readings mode	
<b>MENU</b>	Press the MENU button to cancel the change and return to the readings mode	Press the MENU button to activate the selected menu item.	
<b>ARROWS</b>	Press the ARROW buttons to increment or decrement the group number.	Press the ARROW buttons to scroll through the menu.	

	<b>Locale Menu</b>	<b>Locale Menu Selection</b>	<b>Changing Language</b>
<b>Operation</b>	<p>Enter the main menu and activate the Locale item.</p> <p>Press the ARROW buttons to scroll through the Locale menu.</p> <p>Press the STORE button to activate the selected menu item.</p>	<p>Language</p> <p>Date</p> <p>Decimal</p>	<p>Enter the Locale menu and activate the Language item.</p> <p>Press the ARROW buttons to scroll through the Language menu. The languages available are dependent on your locale.</p> <p>Press the STORE button to activate the language for the meter text.</p>
<b>Display</b>	<div style="border: 1px solid black; padding: 5px; width: fit-content;">           Locale Language         </div>		<div style="border: 1px solid black; padding: 5px; width: fit-content;">           Language English         </div>
<b>STORE</b>	<p>Press the STORE button to activate the selected menu item.</p>		<p>Press the STORE button to activate the language for the meter text.</p>
<b>GROUP</b>	<p>Press the GROUP button to return to the readings mode.</p>		<p>Press the GROUP button to return to the readings mode.</p>
<b>MENU</b>	<p>Press the MENU button to activate the selected menu item.</p>		<p>Press the MENU button to activate the language for the meter text.</p>
<b>ARROWS</b>	<p>Press the ARROW buttons to scroll through the menu.</p>		<p>Press the ARROW buttons to scroll through the menu.</p>

	<b>Changing Date Format</b>	<b>Date Menu Selection</b>
<b>Operation</b>	<p>Enter the Locale menu and activate the Date item.</p> <p>Press the ARROW buttons to scroll through the Date menu.</p> <p>Press the STORE button to activate the selected menu item.</p>	<p>MM/DD/YY DD/MM/YY</p> <p>Selecting the MM/DD/YY item will format the date in the month/day/year order. Selecting the DD/MM/YY item will format the date in the day/month/year order.</p>
<b>Display</b>	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> Date MM/DD/YY </div>	
<b>STORE</b>	Press the STORE button to activate the selected menu item.	
<b>GROUP</b>	Press the GROUP button to return to the readings mode.	
<b>MENU</b>	Press the MENU button to activate the selected menu item.	
<b>ARROWS</b>	Press the ARROW buttons to scroll through the menu.	

**NOTE: Actual Date and Times are only used with the L622 model with Stat Pak software.**

	<b>Changing Decimal Format</b>	<b>Decimal Menu Selection</b>
<b>Operation</b>	<p>Enter the Locale menu and activate the Decimal item.</p> <p>Press the ARROW buttons to scroll through the Numbers menu.</p> <p>Press the STORE button to activate the selected menu item.</p>	<p>Period Comma</p> <p>Selecting the Period format will use the period '.' character as the decimal separator. Selecting the Comma format will use the comma ',' character as the decimal separator.</p>
<b>Display</b>	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> <p>Decimal Period</p> </div>	
<b>STORE</b>	Press the STORE button to activate the selected menu item.	
<b>GROUP</b>	Press the GROUP button to return to the readings mode.	
<b>MENU</b>	Press the MENU button to activate the selected menu item.	
<b>ARROWS</b>	Press the ARROW buttons to scroll through the menu.	

	<b>Changing Species</b>	<b>Editing Specific Gravity</b>	<b>Editing Species Name</b>												
<b>Operation</b>	<p>Enter the main menu and activate the Species item.</p> <p>Use the ARROW buttons to scroll through the species list (See the section "Factory Species List").</p> <p>Press the STORE button to activate the selected species.</p>	<p>Enter the Edit SG mode through the Species item.</p> <p>Use the ARROW buttons to change the SG number.</p> <p>Press the STORE button to save and activate changes.</p>	<p>Enter the Edit Name mode through the Species item and Edit SG mode.</p> <p>Use the ARROW buttons to change the alpha character.</p> <p>Press the MENU button to move the edit cursor to the right.</p> <p>Press the STORE button to save and activate changes.</p>												
<b>Display</b>	<table border="1"> <tr> <td>Species</td> <td>SG</td> </tr> <tr> <td>Walnut,Black</td> <td>.41</td> </tr> </table>	Species	SG	Walnut,Black	.41	<table border="1"> <tr> <td>Edit</td> <td>SG</td> </tr> <tr> <td>Walnut,Black</td> <td>.45</td> </tr> </table>	Edit	SG	Walnut,Black	.45	<table border="1"> <tr> <td>Edit Name</td> <td></td> </tr> <tr> <td>Walnut,Black</td> <td>.45</td> </tr> </table>	Edit Name		Walnut,Black	.45
Species	SG														
Walnut,Black	.41														
Edit	SG														
Walnut,Black	.45														
Edit Name															
Walnut,Black	.45														
<b>STORE</b>	Press the STORE button to activate the selected species.	Press the STORE button to save and activate changes.	Press the STORE button to save and activate changes.												
<b>GROUP</b>	Press the GROUP button to return to the readings mode.	Press the GROUP button to cancel changes and return to the readings mode.	Press the GROUP button to cancel changes and return to the readings mode.												
<b>MENU</b>	Press the MENU button to activate the Edit SG mode.	Press the MENU button to activate the Edit Name mode.	Press the MENU button to move the edit cursor one character to the right. That character will be cleared.												
<b>ARROWS</b>	Press the ARROW buttons to scroll through the species list.	Press the ARROW buttons to increment or decrement the SG number.	Press the ARROW buttons to cycle through the alphabet.												

	<b>Mean/Std Statistics</b>	<b>High/Low Statistics</b>												
<b>Operation</b>	<p>Enter the main menu and activate the Mean/Std item.</p> <p>Use the ARROW buttons to scroll through the group statistics. Only groups that contain readings will be shown.</p> <p>Press the STORE button to return to the readings mode.</p>	<p>Enter the main menu and activate the High/Low item.</p> <p>Use the ARROW buttons to scroll through the group statistics. Only groups that contain readings will be shown.</p> <p>Press the STORE button to return to the readings mode.</p>												
<b>Display</b>	<table border="1"> <tr> <td>Mean</td> <td>Std</td> <td>GRP</td> </tr> <tr> <td>8.3</td> <td>4.7</td> <td>0</td> </tr> </table>	Mean	Std	GRP	8.3	4.7	0	<table border="1"> <tr> <td>High</td> <td>Low</td> <td>GRP</td> </tr> <tr> <td>11.0</td> <td>6.1</td> <td>1</td> </tr> </table>	High	Low	GRP	11.0	6.1	1
Mean	Std	GRP												
8.3	4.7	0												
High	Low	GRP												
11.0	6.1	1												
<b>STORE</b>	Press the STORE button to return to the readings mode.	Press the STORE button to return to the readings mode.												
<b>GROUP</b>	Press the GROUP button to advance to the next valid group.	Press the GROUP button to advance to the next valid group.												
<b>MENU</b>	Press the MENU button to return to the readings mode.	Press the MENU button to return to the readings mode.												
<b>ARROWS</b>	Press the ARROW buttons to increment or decrement the group number.	Press the ARROW buttons to increment or decrement the group number.												

	<b>Clear Menu</b>	<b>Clear Menu Selection</b>
<b>Operation</b>	<p>Enter the main menu and activate the Clear menu.</p> <p>Press the ARROW buttons to scroll through the Clear menu.</p> <p>Press the STORE button to activate the selected item.</p>	<p>Group Readings</p> <p>All Groups</p>
<b>Display</b>	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> <p>Clear Group</p> </div>	
<b>STORE</b>	Press the STORE button to activate the selected item.	
<b>GROUP</b>	Press the GROUP button to return to the readings mode.	
<b>MENU</b>	Press the MENU button to activate the selected item.	
<b>ARROWS</b>	Press the ARROW buttons to scroll through the menu.	

	<b>Clear Group</b>	<b>Clear Readings</b>	<b>Clear All Groups</b>
<b>Operation</b>	<p>Enter the Clear menu and activate the Group item.</p> <p>Press the ARROW buttons to select the group to clear. Only groups that contain readings will be shown.</p> <p>Press the STORE button to clear the selected group.</p>	<p>Enter the Clear menu and activate the Readings item.</p> <p>Press the ARROW buttons to select the reading to clear.</p> <p>Press the STORE button to clear the selected reading.</p>	<p>Enter the Clear menu and activate the All Groups item.</p> <p>Press the STORE button to clear all groups.</p> <p>Press any other button to cancel operation and return to the readings mode.</p>
<b>Display</b>	<div style="border: 1px solid black; padding: 5px; width: fit-content;"> Group 0 </div>	<div style="border: 1px solid black; padding: 5px; width: fit-content;"> Reading      GRP 17.6 %    10      5 </div>	<div style="border: 1px solid black; padding: 5px; width: fit-content;"> All Groups Yes = STORE </div>
<b>STORE</b>	Press the STORE button to clear the selected group.	Press the STORE button to clear the selected reading.	Press the STORE button to clear all groups.
<b>GROUP</b>	Press the GROUP button to advance to the next valid group.	Press the GROUP button to advance to the next valid group.	Press the GROUP button to return to the readings mode.
<b>MENU</b>	Press the MENU button to cancel and to return to the readings mode.	Press the MENU button to return to the readings mode.	Press the MENU button to return to the readings mode.
<b>ARROWS</b>	Press the ARROW buttons to increment or decrement the group number.	Press the ARROW buttons to increment or decrement reading number.	Press the ARROW button to return to the readings mode.



	Calibration
<b>OPERATION</b>	Enter the Menu Selection function and activate the Calibration item.
<b>DISPLAY</b>	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;">           Calibration            XX.X %         </div>
<b>STORE</b>	Press the any button to return to the %MC Readings mode.
<b>GROUP</b>	
<b>MENU</b>	
<b>ARROWS</b>	

## Checking Calibration

**Calibration is factory set.** It may be checked by using a Wagner Calibration Verification Block (CVB) (P/N: 840-60130-003). Use only to verify L620 factory calibration is within tolerance limits. If calibration is out of tolerance, return L620 to factory or repair depot for re-calibration. Never adjust L620 to this device. Protect CVB from direct sunlight. Store in cool dry place. Follow these steps for checking calibration.

1. Enter the Calibration menu item.
2. Hold the meter in mid air so the bottom is several feet from any object. The correct reading for air is .0 %MC. If the reading is outside the range, -.2 to .2 %MC, the unit is out of calibration.
3. Place the CVB, rubber feet down, on a metal surface: such as a file cabinet, a piece of sheet metal, etc.
4. Orientate the long axis of the handmeter with the long axis of the CVB. Press the handmeter sensor in the center of the CVB and observe the reading. The correct reading is 20 %MC. If the reading is outside the range, 18 to 22 %MC, the unit is out of calibration.

**Warning**—There are two (2) hole plugs located on either side of the L620 handle. Do not remove these plugs because the adjustments below them are factory set and should not be adjusted by the customer. If adjustment is attempted, the unit will not be in calibration and will require factory re-calibration. Also if adjustment is attempted, warranty will be voided.

	<b>Backlight</b>	<b>Battery</b>	<b>Restore Factory</b>
<b>Operation</b>	<p>Enter the main menu and activate the Backlight item.</p> <p>Press the STORE button to change state of the backlight to ON or OFF.</p> <p>Life-time for alkaline batteries is ~9 hours (continuous use, Backlight ON).</p>	<p>Enter the main menu and activate the Battery item.</p> <p>When a low battery condition occurs, the battery voltage bar graph will be replaced with the message Too Low. Also, when in the readings mode, GRP will be replaced with BAT.</p> <p>Life-time for alkaline batteries is ~50 hours (continuous use, Backlight OFF).</p>	<p>Pressing the ARROW buttons at the same time while in the readings mode will clear memory and restore the L620 to factory settings. <b>Warning</b>, you will lose all changes made to the species list.</p> <p>Press the STORE button to restore factory settings.</p> <p>Press the GROUP or MENU button to cancel operation and return to the readings mode.</p>
<b>Display</b>	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;">Backlight ON</div>	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;"> XXXXXXXXXXXXXXXXXX 4.0 Volts </div>	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;"> Factory Yes = STORE </div>
<b>STORE</b>	Press the STORE button to change state of the backlight.	Press the STORE button to return to the readings mode.	Press the STORE button to restore factory settings.
<b>GROUP</b>	Press the GROUP button to return to the readings mode.	Press the GROUP button to return to the readings mode.	Press the GROUP button to cancel the operation and return to the readings mode.
<b>MENU</b>	Press the MENU button to return to the readings mode.	Press the MENU button to return to the readings mode.	Press the MENU button to cancel the operation and return to the readings mode.
<b>ARROWS</b>	Press the ARROW buttons to return to the readings mode.	Press the ARROW buttons to return to the readings mode.	No function.

## Technical Notes

**Readings and Groups**--The L620 can store up to 500 readings in up to 5 groups. Groups are numbered 0 to 4 and can be selected at random. There is no limit to the number of readings per group as long as the total readings of all groups do not exceed 500.

**Automatic Menu Escape**--When in the menu system and 15-seconds of no key presses, the meter will automatically return to the %MC Reading mode ready to store the next reading in the current group.

**Repeat Key**--If a key (button) is held down for more than one (1) second, then the key pressed is repeated at a rate of one (1) repeat each second. After 5 repeats the rate doubles and after an additional 5 repeats the rate doubles again. Use this feature to scroll through long list of species or readings.

## Factory Species List

The L620 has a factory default of **32** species. The species name or specific gravity (SG) value may be changed from the Editing Specific Gravity mode or Editing Species Name mode menu item. This allows you to tailor the L620 species setting to a species not listed. The values shown are median SG values. Any single wood species will have an SG variation. Again, if necessary, you can edit these SG values if you feel that your particular species has a slightly different SG median value based on your geographic region.

Additionally, the following resource is available to obtain specific gravity values for species not found in the L620: <http://www.wagnersg.com/>

<b>Species</b>	<b>SG</b>
Alder,Red	.41
Cedar,EastRed	.47
Cedar,WestRed	.32
Cherry,Black	.50
Douglas Fir	.48
Fir,Balsam	.35
Fir,Cal Red	.38
Fir,Subalpine	.32

Fir,White	.39
Hemlock,East	.40
Hemlock,West	.45
Hickory,Nutmeg	.60
Hickory,Pecan	.66
Hickory,Mockr	.72
Larch,Western	.52
Maple,Sugar	.63
Oak,North Red	.63
Oak,South Red	.59
Oak,White	.68
Pine,E White	.35
Pine,Jack	.43
Pine,Loblolly	.51
Pine,Ld gepole	.41
Pine,Longleaf	.59
Pine,Pnderosa	.40
Pine,Shrtleaf	.51
Pine,Slash	.59
Pine,Sugar	.36
Poplar, Yellow	.42
Redwood, Old	.40
SYP	.56
Custm Species	.50

## Species Setting Tables

for Hardwoods, Softwoods, and Imported Species

### Hardwood Species

Spec. Gravity:	Hardwood Species:
0.41	Alder, Red
0.49	Ash, Black
0.58	Ash, Blue
0.56	Ash, Green
0.55	Ash, Oregon
0.55	Ash, Red
0.60	Ash, White
0.39	Aspen, Bigtooth
0.38	Aspen, Quaking
0.37	Basswood, American
0.64	Beech, American
0.55	Birch, Paper
0.65	Birch, Sweet
0.53	Birch, White
0.62	Birch, Yellow
0.38	Butternut
0.50	Cherry, Black
0.43	Chestnut, American
0.34	Cottonwood, Balsam Poplar
0.35	Cottonwood, Black
0.40	Cottonwood, Eastern
0.72	Dogwood, Flowering
0.50	Elm, American
0.63	Elm, Rock
0.53	Elm, Slippery
0.53	Hackberry
0.66	Hickory (Pecan), Bitternut
0.60	Hickory (Pecan), Nutmeg
0.66	Hickory, Pecan
0.62	Hickory (Pecan), Water
0.72	Hickory (True), Mockernut
0.75	Hickory (True), Pignut

Spec. Gravity:	Hardwood Species:
0.72	Hickory (True), Shagbark
0.69	Hickory (True), Shellbark
0.55	Holly, American
0.70	Hophornbeam, Eastern
0.55	Laurel, California
0.69	Locust, Black
0.64	Madrone, Pacific
0.50	Magnolia, Southern
0.48	Maple, Bigleaf
0.57	Maple, Black
0.60	Maple, Hard
0.54	Maple, Red
0.47	Maple, Silver
0.51	Maple, Soft
0.63	Maple, Sugar
0.61	Oak (Red), Black
0.53	Oak, California Black
0.68	Oak (Red), Cherrybark
0.63	Oak (Red), Laurel
0.63	Oak (Red), Northern Red
0.63	Oak (Red), Pin
0.67	Oak (Red), Scarlet
0.59	Oak (Red), Southern Red
0.63	Oak (Red), Water
0.69	Oak (Red), Willow
0.64	Oak (White), Bur
0.66	Oak (White), Chestnut
0.63	Oak (White), Overcup
0.67	Oak (White), Post
0.67	Oak (White), Swamp Chestnut
0.72	Oak (White), Swamp White
0.68	Oak, White
0.71	Persimmon, Common
0.46	Sassafras
0.52	Sweetgum
0.49	Sycamore, American

<b>Spec. Gravity:</b>	<b>Hardwood Species:</b>
0.64 .....	Tanoak
0.50 .....	Tupelo, Black
0.50 .....	Tupelo, Water
0.55 .....	Walnut, Black
0.39 .....	Willow, Black
0.42 .....	Yellow-Poplar

### Softwood Species

<b>Spec. Gravity:</b>	<b>Softwood Species:</b>
0.46 .....	Baldcypress
0.44 .....	Cedar, Alaska
0.32 .....	Cedar, Atlantic White
0.47 .....	Cedar, Eastern Red Cedar
0.37 .....	Cedar, Incense
0.31 .....	Cedar, Northern White
0.43 .....	Cedar, Port Orford
0.32 .....	Cedar, Western Red Cedar
0.44 .....	Cedar, Yellow
0.48 .....	Douglas Fir
0.35 .....	Fir, Balsam
0.38 .....	Fir, California Red
0.37 .....	Fir, Grand
0.39 .....	Fir, Noble
0.43 .....	Fir, Pacific Silver
0.32 .....	Fir, Subalpine
0.39 .....	Fir, White
0.40 .....	Hemlock, Eastern
0.45 .....	Hemlock, Mountain
0.45 .....	Hemlock, Western
0.52 .....	Larch, Western
0.35 .....	Pine, Eastern White
0.43 .....	Pine, Jack
0.51 .....	Pine, Loblolly
0.41 .....	Pine, Lodgepole
0.59 .....	Pine, Longleaf
0.52 .....	Pine, Pitch
0.56 .....	Pine, Pond

<b>Spec. Gravity:</b>	<b>Softwood Species:</b>
0.40 .....	Pine, Ponderosa
0.46 .....	Pine, Red
0.48 .....	Pine, Sand
0.51 .....	Pine, Shortleaf
0.59 .....	Pine, Slash
0.45 .....	Pine, Spruce
0.36 .....	Pine, Sugar
0.48 .....	Pine, Virginia
0.35 .....	Pine, Western White
0.40 .....	Redwood, Old-Growth
0.35 .....	Redwood, Young-Growth
0.42 .....	Spruce, Black
0.35 .....	Spruce, Engelmann
0.40 .....	Spruce, Red
0.40 .....	Spruce, Sitka
0.36 .....	Spruce, White
0.56 .....	SYP (Southern Yellow Pine)
0.53 .....	Tamarack

### Imported Species

<b>Spec. Gravity:</b>	<b>Imported Species:</b>
0.65 .....	Afrormosia
0.57 .....	Andiroba
0.51 .....	Avodire
0.45 .....	Banak (Virola spp.)
0.70 .....	Benge (Guibourtia arnoldiana)
0.42 .....	Cativo
0.72 .....	Degame
0.55 .....	Determa
0.40 .....	Hura
0.57 .....	Iroko
0.75 .....	Jarrah
0.38 .....	Jelutong
0.70 .....	Kapur
0.76 .....	Keruing (Dipterocarpus spp.)
0.40 .....	Limba
0.44 .....	Mahogany, African

<b>Spec. Gravity:</b>	<b>Imported Species:</b>
0.47 .....	Mahogany, True
0.63 .....	Manni
0.67 .....	Merbau
0.54 .....	Mersawa
0.32 .....	Obeche
0.35 .....	Okoume
0.68 .....	Opepe
0.49 .....	Parana Pine
0.66 .....	Peroba de campos
0.71 .....	Peroba rosa
0.42 .....	Primavera
0.71 .....	Purpleheart
0.45 .....	Radiata Pine
0.56 .....	Ramin
0.55 .....	Roble (Tabebuia spp.,Robble group)
0.84 .....	Rosewood, Brazilian (Dalbergia nigra)
0.79 .....	Rosewood, Indian
0.60 .....	Sapele
0.44 .....	Spanish Cedar
0.57 .....	Teak

## Checking the Moisture Content in Veneer

You can check the moisture content of veneer with your Wagner Hand-Held Moisture Meter as follows:

1. Put veneer into a tight stack of at least 1 inch, and separate the stack by at least 3 inch to 4 inch from the rest of the stack. Measuring a stack less than the scan depth of the meter will give you a reading that is lower than the true moisture reading. Refer to the species setting table for the wood you are using.

2. Electro Static Discharge (ESD) needs to be prevented, as Wagner's warranty doesn't cover ESD damage. The instruments are tested to withstand a 15 KV static charge but not the typical 150 - 250 KV found in a veneer charge. The veneer table should be earth grounded with a metal wand attached by wire to the table. The wand must then be run up and down the edge of a veneer stack to discharge static, or the person using the moisture meter must have a Velcro wrist band with a tethered strap which is grounded.

These same static precautions apply to lumber moving from a planer; the hand-meter is not an in-line measurement system. This unit is meant to check lumber while stationary.

If these guidelines are adhered to, the risk of ESD damage to your moisture meter is greatly reduced or eliminated. Please call the factory if you have any questions or concerns about this information.

---



## Questions and Answers

**Q: I'm nervous about buying a new technology. What about Wagner Meters? How long have they been building this type of moisture meter?**

**A:** Since 1966, Wagner Meters has been providing quality moisture measurement equipment. Wagner is the leading supplier of moisture measurement equipment for the primary forest products industry. Closely scrutinized and approved by numerous university studies and used for years by professional wood-grading associations, Wagner's Hand-Held Moisture Meters continue to prove reliable and consistent, with unsurpassed convenience and ease-of-use.

**Q: How do Wagner Hand-Held Moisture Meters operate?**

**A:** Wagner Hand-Held Moisture Meters send technologically advanced electromagnetic radio waves deep into the wood without leaving destructive holes. Known around the world for speed and accuracy, Wagner meters supply instant readings, scanning large amounts of board feet in seconds. Virtually unaffected by temperature and \* humidity, they scan right through finished products.

\* For frozen wood with up to 15% moisture content, accurate measurements can be obtained. When the frozen lumber moisture content is suspected to be over 15%, a relative reading can be obtained. Contact Wagner technical support if additional guidance is needed.

**Q: What about gradients and wet pockets?**

**A:** Although the various drying processes for green lumber can leave wet cores and pockets, moisture continues to pass from fiber to fiber within the wood until it has equalized throughout the whole board, and then to surrounding humidity levels. Determining if a board or load of lumber will equalize within tolerance levels can be difficult and tricky, but Wagner Hand-Held Moisture Meters provide this information automatically. Penetrating deep into the wood, they mathematically determine equalized moisture content and are capable of checking truckloads of board feet for specified moisture content in minutes. For even more convenience, many companies use their Wagner Hand-Held Moisture Meters to read right through the plastic wrapping around the wood on new deliveries before they allow unloading!

**Q: How can I take accurate moisture readings without sticking pins into my wood? Why doesn't my new Wagner Hand-Held Moisture Meter read the same moisture content as my old pin meter?**

**A:** Pin-type meters work on a primitive, resistance principle that basically measures the flow of electricity through a substance. This method is subject to many environmental variables that can dramatically affect moisture readings such as chemicals in the water trapped within the wood and the temperature of the wood. Pin-type meter readings must always be corrected for any difference in temperature above or below 70 degrees F. Wagner Hand-Held Moisture Meters use advanced electro-magnetic wave technology and are sensitive to changes in density and the actual moisture content of the wood.

**Q: What is the narrowest piece of lumber I can measure accurately with the Wagner Hand-Held Moisture Meter?**

**A:** Model L620 measures boards as narrow as 2 1/2" in width.

**Q: What thickness boards can I measure?**

**A:** Model L620 meters are designed to measure wood from 1 inch to 3 inches thick.

Note: Make sure there is nothing behind boards less than 1" thick when you take the measurement because Wagner Hand-Held Moisture Meters will read through the thinner board and measure the moisture in the material behind. Under no circumstances measure a piece of wood that is sitting on a metal table. (The Wagner L620 measures to a depth of 1", which will reach the center of a 2" board)

**Q: Can I get accurate results on 4x or larger lumber?**

**A:** No hand-held moisture meter can accurately read to the center of 4x material unless you are willing and able to drive pins 1" into the lumber all the way up and down its length and breadth. However using a Wagner Hand-Held Moisture Meter, you can quickly and easily scan 4x lumber on both sides (4 x 4's on all four sides). Then only the center 1 5/8" would be unmeasured.

Note: Most wood grading agencies are generally not concerned about the moisture content in the center of thicker beams and posts. They consider 1" deep scanning more than adequate.

**Q: Where is the reading taken with a pin-type meter? With a Wagner Hand-Held Moisture Meter?**

**A:** Pin-type Meters take their measurements at the depth that you've been able to drive the pins. . . and only in a line between the non-insulated portion of the pins (often only the tips). In contrast, Wagner Hand-Held Moisture Meters generate a three-dimensional field that measures a 2 1/2" wide, 2 1/2" long, 1" (minimum) thick volume of wood under the entire sensor.

**Q: How does this difference in measuring techniques affect accuracy?**

**A:** If you're using a pin-type meter, the moisture content you are reading is determined by the micro-thin path the electricity takes to travel from one pin to the other. In effect, it measures only the moisture content of that very tiny path. If there is a single wet fiber between the pins, the electric charge will flow easily along that fiber and cause pin-type meters to exaggerate the moisture content in the wood when in fact it is just a very small fiber that is wet. However, if the place you choose to drive the pins into the wood is simply extraordinarily dry and untypical of the rest of the piece you will get an exaggerated dry reading. On the other hand, Wagner Hand-Held Moisture Meters take an average of the moisture content discovered by the full scan of the three-dimensional field so small wet fibers are not read as large wet spots. Plus, it only takes seconds to scan the entire board.

**Q: How are moisture meters affected by surface moisture?**

**A:** Most moisture meters can be affected by standing water, or visible water on the board. You should always wipe off as much excess water as possible. Once the standing water is removed, Pin-type meters with non-insulated pins will register a highly exaggerated moisture reading. Wagner Hand-Held

Meters will read slightly higher than normal (probably less than 3 to 4%). If water is allowed to soak into the wood, it will naturally show a higher moisture content. If a piece of wood is quite rough, it will soak up the water quite readily and readings will be affected.

**Q: What are the effects of relative humidity on Wagner Hand-Held Moisture Meter readings?**

**A:** As long as there is not condensation on the bottom surface of the instrument there is no effect from changes in relative humidity.

**Q: Do the meters on the Wagner Hand-Held products ever require readjustment? Does my Wagner Hand-Held Moisture Meter need to be calibrated? If so, how often must it be done?**

**A:** Occasionally Wagner Hand-Held Moisture Meters require adjustment. However, the process of checking zero points and calibration is very simple.

Note: Wagner Hand-Held Moisture Meters are originally calibrated at the factory. Type and amount of use will determine how long this original calibration will last. A calibration verification block is available for the customers who must check their calibration often. Anytime that the meter is not reading correctly on that calibration verification block, it should be sent into the factory for calibration.

**Q: I have a very thin veneer over a door stock and I'm trying to measure the moisture content of the core. Can I measure accurately through laminated materials?**

**A:** If you're measuring an all-wood door with a very thin veneer wood laminate, you can probably use a correction factor to determine the moisture content of the core material.

Note: If you're measuring a door that has a plastic laminate or Formica-type laminate, the Formica laminate is going to have its own density, which is going to affect the reading of the meter. You can determine the variance caused by the laminate by first measuring only the core and then the core with the laminate. For example, if the core measures 12% without the laminate and 13.5% with, you will then know to correct your readings of the combined material by 1.5%.

**Q: Will Wagner Hand-Held Moisture Meters work the same on rough lumber as they do on smooth clean lumber?**

**A:** There are little fibers in very rough material that actually allow a minute layer of air between the meter and the main body of the wood. However, this should not materially affect the reading, or if it does, only slightly lower.

Note: It's important on rough material to use some pressure and force the meter down firmly against the wood. Occasionally, the measurement of exceptionally rough material may necessitate adding 1 to 2% to get an accurate reading.

**Q: Can you check moisture content of plywood, particleboard or wafer board with hand-held meters?**

**A:** Because of the glues and mixed species nature of these materials, it is very difficult to take reliable moisture readings with pin-type or Wagner Hand-Held Moisture Meters.

Note: However, if you would like to work up your own calibrations for materials you use repetitively, you can contact Wagner for guidelines and suggestions.

**Q: What about the orientation of the meter on the wood?**

**A:** Your Wagner Hand-Held Moisture Meter uses advanced electromagnetic wave technology and is completely unaffected by orientation (cross-grain or with the grain) on the wood.

**Q: Are the readings that I take with my Wagner Hand-Held Moisture Meter affected by the temperature of the wood like those taken with a pin-type meter? What about frozen wood?**

**A:** Unlike pin-type meters which require corrections for temperatures above or below 70 degrees F, the readings on the Wagner Hand-Held Moisture Meter are essentially unaffected by the temperature of the wood. Moisture content can accurately be measured as soon as the hot wood is taken out of the kiln. When the same wood is measured hours later, again with the Wagner Hand-Held Moisture Meter, the readings stay consistently the same, unless the wood continues to dry during the cooling process.

For frozen wood, as long as the moisture content of the wood you are measuring is below 15%, you can get reliable readings. When moisture content readings in frozen wood exceed 15%, you will need to make corrections.

**Q: How rugged are the Wagner Hand-Held Moisture Meters? Are they too delicate to be used on an abusive production line?**

**A:** The Wagner L620 Moisture Meter is a tough production-line model. It can be damaged by being dropped or slammed down hard on wood surfaces, as can any meter. If a large

volume of wood is to be measured, an in-line system should be used.

**Q: How accurate is the Wagner Hand-Held Moisture Meter?**

**A:** The Wagner Hand-Held Moisture Meter is as accurate, or more accurate than any moisture detector that is on the market. This can be verified by several university studies.

**Q: Is the Wagner technology safe to use?**

**A:** Wagner's Hand-Held Moisture Meters have been tested and certified to comply with FCC and CE regulations. Wagner's electromagnetic wave technology produces less electromagnetic radiation than standard house wiring.

**Q: What is proper moisture content in wood? What moisture content is considered too high or too low?**

**A:** There is no right answer for this question. As a rule, differences in woods and their uses determine the moisture content desired. For instance, if the wood is to be used in construction as a stud for building, the moisture content requirement could be under 15% to 19%. If the wood is to be glued, and it is too dry it will not bond. If it is too wet, it will not hold. Ideally the moisture content of wood to be used in furniture is between 6 and 8%.

To determine the proper moisture content for your application, contact your local university's forestry department or one of the associations supporting your industry's professionals. You may also call the Forest Products Research Laboratory in Madison, WI: 608-231-9200.

## Warranty

Wagner Meters warrants this product against defects in material and workmanship for one (1) year from the date of purchase, subject to the following terms and conditions:

Wagner's liability under this warranty shall be limited, at Wagner's option, to the repair or replacement of this product or any part there of which is demonstrated to be defective. To exercise this warranty, customer must telephone, fax, or e-mail Wagner's Customer Service Department for factory instructions for shipment. This limited warranty does not apply if accident, negligent handling, misuse, alteration, damage during shipment, or improper service have damaged the product. Wagner Meters shall in no event be liable for any breach of warranty or defect in this product, which exceeds the amount of the purchase price of the product. Wagner Meters shall not be liable for incidental or consequential damages for the breach of any express or implied warranty with respect to this product or its calibration.

With proper care and maintenance, as recommended in the manual, the meter should stay in calibration; however, because Wagner Meters has no control over the manner in which the unit will be used, it makes no warranty that the meter will stay in calibration for any specific period of time. Wagner Meters recommends purchasing a calibration block or

returning the unit to the factory for diagnostic check-up and recalibration, on the anniversary date of purchase, each year the meter is in service.

**This warranty is in lieu of all other warranties, whether oral or written, express or implied. Any implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are excluded.** Agents and employees of Wagner Meters are not authorized to make modifications to this warranty or additional warranties binding on Wagner Meters. Accordingly, additional statements, whether oral or written, except written statements from an officer of Wagner Meters do not constitute warranties and should not be relied upon by the customer.

This warranty is personal to the customer purchasing the product from Wagner Meters and is not transferable.

## Registration

Please register your new meter with Wagner Meters at: [www.genuinewagner.com](http://www.genuinewagner.com)

## Repair Service

All products returned for repair must be accompanied by a Repair Order form found on our website at:

[www.wagnerrepairs.com](http://www.wagnerrepairs.com)

Repair should be returned to the following address:

**Wagner Meters  
326 Pine Grove Road  
Rogue River, Oregon 97537  
Phone (541) 582-0541  
Fax (541) 582-4138**

Standard repairs: Customer must pay the expense of shipping the product to and from Wagner.

Warranty repairs: Customer must pay the expense of shipping the product to Wagner. Wagner will pay the cost of return shipment by surface carrier within the Continental United States. Customer must pay all extra costs of expedited shipping or shipment to and from locations outside of the Continental United States.

E-mail:

[support@wagnermeters.com](mailto:support@wagnermeters.com)

Web:

[www.wagnermeters.com](http://www.wagnermeters.com)

## International Repair Service

Call or email for nearest Repair Depot

Phone:

1-800-634-9961

Email:

[support@wagnermeters.com](mailto:support@wagnermeters.com)

## Spare/Replacement Parts and Part Numbers

840-60130-003, Calibration Verification Block

711-00524-003, Battery Cover